

# WOLF GOURMET CUTLERY

---

USE & CARE INFORMATION



## Wolf Gourmet Cutlery

### THANK YOU

Your purchase of a Wolf Gourmet Cutlery set attests to the importance you place upon the quality and performance of your cooking tools.

This set includes a 3<sup>1</sup>/<sub>2</sub>" paring knife, 8" Chef's knife, 8" bread knife and a sharpening steel.

We know you are eager to start using your new cutlery set, but before you do, please take some time to read this use & care information. Whether you are a beginning cook or expert chef, it will be to your benefit to familiarize yourself with the features, safety practices and care recommendations for your new cutlery.

Leveraging years of expertise, Wolf's corporate chefs have worked hard to develop a cutlery set created with high quality materials and designed to help you produce superior results for years to come.

- Single piece of high carbon, stainless German steel.
- Full tang runs the entire length of the handle, providing excellent balance.
- Triple riveted handles designed with ergonomic grip for long-lasting durability and comfort.

## CLEANING

We recommend you hand wash your cutlery in warm, soapy water. Dry thoroughly with a soft towel. Do not wash cutlery in a dishwasher.

## SHARPENING

It is important that knives are regularly sharpened to keep them in good condition and ensure safety. Use your sharpening steel to hone your blades and keep the edges sharp. Do not hone knives with serrated edges.

## SAFETY TIPS

For your safety be sure to follow these basic guidelines:

- Always use a sharp knife.
- Choose the correct knife for the job.
- Only hold a knife by its handle.
- Always cut on a cutting board. Hard surfaces dull the knife and can damage the blade.
- Always put knife down flat after use.
- Keep out of reach of children.
- Do not run your finger along the blade to check for sharpness.
- Do not store knives loose in a drawer.
- Do not use a knife to open bottles or cans.

## LIFETIME WARRANTY

Wolf Appliance Inc. promises to repair or replace any item found to be defective in material or workmanship under normal household use and following care instructions. Minor imperfections and slight color variations are normal. This excludes damage from misuse or abuse, such as improper cleaning, overheating, neglect, accident, fire or theft and does not apply to scratches, stains and discolorations. This warranty also excludes incidental or consequential damages. If you believe you have a defective product, send the product, freight prepaid, with a letter explaining the defect (USA consumers only), to:

Wolf Appliance, Inc., Attn. Consumer Service, 2115 Pinehurst Dr., Middleton, WI 53562

Included with the product(s) should be the following information:  
Full name, full mailing address (no P.O. boxes), daytime phone number and description of product(s), reason for return and copy of invoice.

Sub-Zero and Wolf Appliance will examine the item(s) and if defective, will repair or replace. Please allow 4 to 6 weeks for processing.

You can contact Sub-Zero and Wolf Appliance customer service at 800-222-7820 or e-mail at [ecommerce@subzero.com](mailto:ecommerce@subzero.com).

